



INTRODUCTION

This documentation describes driver settings in MAC OS environment

Driver availability may depend of printer version (see <u>www.evolis.com</u> for any details)

ENVIRONMENT

How to set the Evolis driver on Mac OS X from 10.4 to 10.12.

- All Evolis printers (except Edikio range)
- MAC OS X from 10.4 to 10.12

Editorial	Indice	Modification	Author
Staff		type	
16/10/2015	A0	Create	STI
24/11/2017	BO	Add ribbons'	CFO
		settings	

1 – DRIVER SETUP OPTIONS

- Open the software used to print cards
 - Open "File" menu
 - Select "Print Settings"



• Make sure "Paper Size" format is set to "Card":



• Open "Advanced Options" and select "Printer Features" to access Evolis driver settings:

	Manufacturer Driver Badgy100		Print				
Paper Size	Card Dimensions 86.0	Printer: Presets:	EVOLIS Badgy100 Default Settings	0		Adva	nced Options x
Orientation	Landscape	4	Layout Paper Handling Cover Page		٥	Der	
Print Layout		11	Printer Features	S W	M		
Card Model	Dimensions 85		Border:	None			dPressa Demons 2010:2014
	Oversized card		Two-Sided.	Reverse page orie	ntation	black repla	ement
		?) PDF 🔽 Hide	Details	Cancel	ОК	ital	L'Edition
			1111				
				L			
		Hannan -				fan Vee	

• In "General" menu from "Feature Set", ribbon type and card insertion/ejection option are present to set driver before printing:



• To save the driver settings, click on "Save Current Setting as Preset...":

~~	Print	-
5.0	Printer: EVOLIS Badgy100 ≎ Presets ✓ Default Settings Last Used Settings	emonstration
pe	Save Current Settings as Preset Featu Show Presets	
	Rotate by 180: No	
85		1
rd		black
		ital

• Rename the preset:

Print	
Preset Name: Default Settings-1	
Preset Available For: Only this printer All printers	
	Cancel OK
Rotate by 180: No 🗘	
? PDF ~ Hide Details	Cancel OK

2 – MONOCHROME PRINTOUTS – BLACK RIBBON PRESET

• As previously describe in section 4 of this document, go to the "Printer Features":

-	Print
Printer: Presets:	EVOLIS Badgy200 Default Settings
	✓ Layout Paper Handling Cover Page
1	Printer Features
	Border: None
	Two-Sided: Off
	 Reverse page orientation Flip horizontally
? PDF V Hid	de Details Cancel OK

• In "Features Sets", select "Ribbon" section:

	Print	
Printer:	EVOLIS Badgy200	•
Presets:	Default Settings	٥
Featur Ribbon: YMC	Printer Features General re Sets Ribbon Graphical settings Varnish adjustment Advanced parameters	
? PDF V Hide	e Details Cancel	ОК

• In "Ribbon" section, select BLACK ribbon type :

		Print			
Printer:	S EVOI	LIS Badgy200		0	
Presets:	BLACK			0	
	Printer	Features	0		
Featur	Sets:	Ribbon	0		
Ribbon V BLA	СК				
? PDF V Hide	e Details		Cance		

• "Save Current Settings as Preset..."

Print
Printer: EVOLIS Badgy200
Presets Default Settings Last Used Settings
Save Current Settings as Preset Fea Show Presets
Ribbon: BLACK 🗢
? PDF V Hide Details Cancel OK

• Rename the preset

	Print	
Preset Name:	Monochrome	
Preset Available For: 🤇	Only this printer All printer	
		Cancel OK
Ribbon: BLACK	٥	
? PDF 🗸 Hide De	etails	Cancel OK

3 – COLOR PRINTOUTS – YMCKO RIBBON PRESET

• As previously described in section 4 of this document, go to the "Printer Features":

r	Print	
Printer: Presets:	EVOLIS Badgy200	
	 Layout Paper Handling Cover Page 	
1	Printer Features Border:	None
	Two-Sided:	Off Reverse page orientation Flip horizontally
? PDF V Hid	e Details	Cancel OK

• In "Features Sets", select "Ribbon" section:

	Print	
Printer: E	EVOLIS Badgy200	
Presets:	Default Settings	
Feature Ribbon: YMCK	Printer Features General Sets V Ribbon Graphical settings O C Varnish adjustment Advanced parameters	
? PDF V Hide I	Details Cancel OK	

• In "Ribbon" section, select YMCKO ribbon type:

	Print	
Printer:	EVOLIS Badgy200	0
Presets:	Last Used Settings	0
	Printer Features	
Featu	re Sets: Ribbon	0
Ribbon 🗸 YMO BLA	CK	
? PDF V Hid	e Details Ca	ncel OK

• "Save Current Settings as Preset..."

Print
Printer: EVOLIS Badgy200
Presets ✓ Default Settings Last Used Settings
Save Current Settings as Preset Fea Show Presets
Ribbon: BLACK ᅌ
? PDF V Hide Details Cancel OK

• Rename the preset

Print	
Preset Name: Color	
Preset Available For: Only this printer	
	Cancel OK
Ribbon: YMCKO 🗘	
? PDF V Hide Details	Cancel OK

4 – SWITCH FROM A PRESET TO ANOTHER

		Print		
	Printer:	EVOLIS Badgy200		0
	Presets:	Monochrome		•
		Printer Features	\$	
	Featur	re Sets: General	\$	
Ro	tate by 180:	No ᅌ		
? PDF	Hide	e Details	Cancel	ОК

• When ribbon type is changed in the printer, select the adequate preset according to ribbon type.

• Preset selection

Default Settings Last Used Settings	
Printer Color Presets ✓ Monochrome	
Save Current Settings as Preset Show Presets Feature Sets: General	
Rotate by 180: No 🗘	
? PDF V Hide Details Cancel	ОК